

# **C11**



### Operation Manual and Parts List

Please read entire manual before operating the tool. Failure to comply with safety guidelines may result in serious injury or death.

### Safety

- 1. Review enclosed C11 operation and safety materials before operating the tool. Only trained professionals are advised to operate the Golden Bear tool.
- 2. Keep fingers, clothing, and other objects away from the front of the tool, moving parts, strap, and buckle during operation.
- 3. Be cautious of excessive tensioning. Over tensioning the strap may result in severe injury due to a break in strapping, which could cause airborne strapping materials or tool parts.
- 4. Wear protective eye equipment when operating the tool.
- Use only recommended strapping for the Golden Bear C11 tool:
  Cord (woven, composite, lashing) strapping: 1¼", 1½", 1½", 2"
- 6. If tensioning below 7,700 pounds use regular foot.
- 7. If tensioning over 7,700 pounds use aggressive foot.
- 8. Inspect tool regularly and discontinue use if parts begin to malfunction or wear.
- 9. Since the C11 tool is battery operated, keep away from water and damp areas. To clean, spray with compressed air or wipe with a dry cloth.
- 10. Reapply strap if damaged, including the area by the gripper foot.
- 11. Remove battery when tool is not in use or during tool maintenance.

### **Operating Instructions**

1. Speed



Select desired speed setting (regular or high speed).

2. Secure strapping



Insert lower strap. Push the thumb release lever on the left side of the tool to drop the foot and secure the strapping.

3. Strap placement



Slide the top cord through the windlass shaft. Hold excess cord to keep away from the front of the tool.

4. Pull tension



Press the trigger to pull the tension.

5. Removal



Release the trigger when desired tension is achieved or until the tool automatically stalls. Slide the control switch at the side of the driver to reverse the winding direction. Press the trigger to unwind the cord from the windlass shaft.

6. Finish




Remove the tool and inspect the strapping.

### C11 Parts List

I t e m N u m b e r	QTY.	Description
C 1 1 - 1	1	Case
C 1 1 - 2	1	WormGear
C 1 1 - 3	1	Worm
C 1 1 - 4	1	LegandShaft
C 1 1 - 5	1	Bearing, Angular Contact
C 1 1 - 6	1	Bearing, Needle
C 1 1 - 7	1	Bearing, Roller
C 1 1 - 8	1	WormShaft
C 1 1 - 9	1	Bearing
C 1 1 - 10	1	WormShaftSpacer
C 1 1 - 11	1	Bearing, Roller
C 1 1 - 12	1	SidePlate
C 1 1 - 13	1	MainShaft
C 1 1 - 14	1	ShaftSpacer
C 1 1 - 15	1	Drill, Milwaukee Fuel
C 1 1 - 16	1	ThumbRelease
C 1 1 - 17	1	BatteryPack
C 1 1 - 18	1	LiftReleaseRetainer
C 1 1 - 19	1	GripperFoot
C 1 1 - 20	1	Spacer
C 1 1 - 21	1	Washer
C 1 1 - 22	1	Screw
C 1 1 - 23	1	Spring
C 1 1 - 24	1	WormPlate
C 1 1 - 25	1	Cap, DrillPins
C 1 1 - 26	1	LockHandle
C 1 1 - 27	1	Spacer, Foot Shaft
C 1 1 - 28	1	Coupling
C 1 1 - 29	1	CouplingKeeper
C 1 1 - 30	1	RollPin
C 1 1 - 31	6	F H C S # 1 0 - 2 4 X ½ " L a r g e
C 1 1 - 32	1	FootPin
C 1 1 - 33	2	Screw
C 1 1 - 34	2	LiftReleaseRetainerScrew
C 1 1 - 35	3	SHCS5/16-18X2"LG.(Stocked)
C 1 1 - 36	6	SHCS#10-24X½"LG.
C 1 1 - 37	2	SHCS#10-32X5/8"LG.(Stocked)
C 1 1 - 38	1	FootSpring
C 1 1 - 39	1	Keystock3/16"X3/16"X1"LG.
C 1 1 - 40	2	Keystock3/16"X3/16"X.6"LG.
C 1 1 - 41	1	GripperHolder
C 1 1 - 42	1	GripperShaft
C 1 1 - 43	1	StopBushing
C 1 1 - 44	1	Spring
C 1 1 - 45	1	SpringBushing
C 1 1 73	1	ן ווינטטפוויוקכן

### Schematic

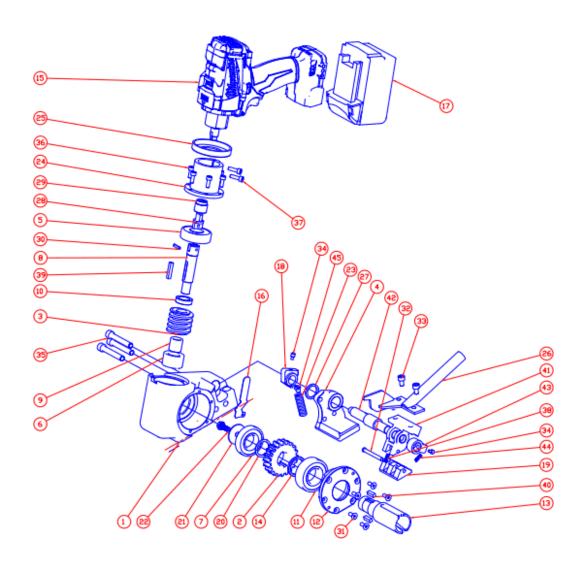

### Warning

- Always comply with the strapping manufacturer limitations. Applying insufficient banding for the load, using insufficient buckles, or applying more tension than the strapping is able to handle may cause serious damage to the operator, tool, and the package.
- Any modifications to the Golden Bear tool should be made by Golden Bear only. Should your tool need attention, contact your Golden Bear Sales Representative.
- The Golden Bear tool has been manufactured with the highest attention to detail, quality, and safety. If for any reason you do not feel that your Golden Bear tool is performing up to standards, or if the tool is presenting difficulty in operation, contact your Golden Bear Sales Representative and discontinue use immediately.

#### **Golden Bear LLC**

Made In The United States of America

Patents Pending

©Copyright 2013, Golden Bear LLC

11/2013

Allstrap
1719 Kenny Rd
Columbus, OH, 43212